


Yealink T4 Series - Hardware Component Instructions

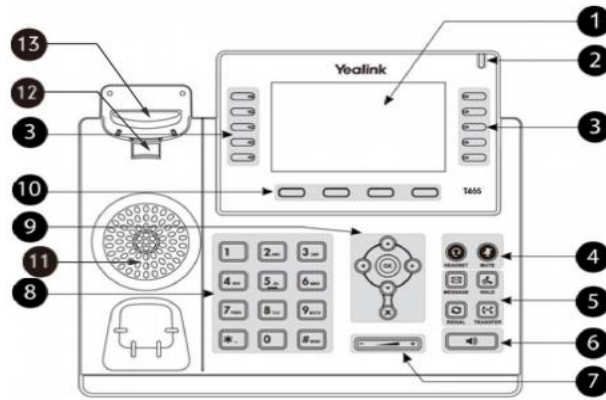

The main hardware components of the SIP-T4 Series IP phone are the LCD screen and the keypad.



	Item	Description
1	LCD Screen	Shows information about calls, messages, soft keys, time, date and other relevant data: <ul style="list-style-type: none"> • Default account • Call information—caller ID, call duration • Icons (for example,) • Missed call text or second incoming caller information • Prompt text (for example, "Saving config file!") • Time and date
2	Power Indicator LED	Indicates call status, message status and phone's system status. <ul style="list-style-type: none"> • Receives an incoming call—Fast-flashing • Receives a voice mail or text message—Slow-flashing
3	Line Keys	Use these keys to activate up to sixteen accounts and assign various features.
4	HEADSET Key	Toggles and indicates the headset mode
	MUTE Key	Toggles and indicates mute feature.
5	MESSAGE Key	Accesses voice messages.
	HOLD Key	Places a call on hold or resumes a held call
	REDIAL Key	Redials a previously dialed number.
	TRANSFER Key	Transfers a call to another party
6	Speakerphone Key	Toggles and indicates the hands-free (speakerphone) mode. The key LED illuminates solid green when hands-free (speakerphone) mode is activated.
7	Volume Key	Adjusts the volume of the handset, headset, speaker, ringer or media.
8	Keypad	Provides the digits, letters, and special characters in context-sensitive applications.
9		Scroll through the displayed information.
		Confirms actions or answers incoming calls.
		Cancels actions or rejects incoming calls.
10	Soft Keys	Label automatically to identify their context-sensitive features.
11	Speaker	Provides hands-free (speakerphone) audio output.
12	Hookswitch Tab	Secures the handset in the handset cradle when the IP phone is mounted vertically. For more information on how to adjust the hookswitch tab.
13	Hookswitch	<ul style="list-style-type: none"> • Picking up the handset from the handset cradle, the hookswitch bounces and the phone connects to the line. • Laying the handset down on the handset cradle, the phone disconnects from the line.